

## Commissioning the machine, Programme chart, Settings PW 6065 Vario



en - GB

To avoid the risk of accidents or damage to the machine it is **essential** to read these instructions before it is installed and commissioned.

M.-Nr. 09 448 490

# Contents

---

<b>Commissioning the machine</b> . . . . .	4
<b>Programme chart</b> . . . . .	11
Basic programmes . . . . .	11
Household . . . . .	15
Sport . . . . .	16
Hotel . . . . .	17
Disinfection . . . . .	19
Hygiene . . . . .	20
Sluice high* . . . . .	20
Bakers/Butchers . . . . .	21
Beauty salons/Health spas . . . . .	22
Professional cleaners . . . . .	23
Special programmes . . . . .	24
<b>Relay control for external dispensing system</b> . . . . .	25
<b>Changing default settings</b> . . . . .	29
<b>Settings menu</b>  . . . . .	30
To open the Settings menu . . . . .	30
<b>Settings/Supervisor level menu</b> . . . . .	31
To open the Settings/Supervisor level menu . . . . .	31
Language  . . . . .	33
Sort languages . . . . .	33
Suds cooling . . . . .	33
Time of day . . . . .	34
Supervisor level . . . . .	34
Display contrast/Display brightness . . . . .	34
Standby . . . . .	35
Memory . . . . .	35
Temperature unit . . . . .	35
Special programmes . . . . .	36
To create a special programme . . . . .	36
Favourites . . . . .	39
Logo . . . . .	39
Language menu . . . . .	39
Intensive water plus . . . . .	40
Water plus . . . . .	40
Save . . . . .	40

# Contents


---


Auto load control . . . . .	40
Pre-wash water . . . . .	40
Main wash water . . . . .	41
Rinse water . . . . .	41
Low water pressure . . . . .	41
Empty sensor . . . . .	41
Water level Cottons . . . . .	42
Water level Min. iron . . . . .	42
PW temp. Cottons . . . . .	42
PW duration Cottons . . . . .	43
Wash time Cottons . . . . .	43
Wash time Min. iron . . . . .	43
No. of programmes . . . . .	43
Target groups . . . . .	43
Pre-wash . . . . .	44
No. rinses Cottons . . . . .	44
No. rinses Min. iron . . . . .	44
No. rinses Disin. . . . .	44
Pre-rinse Cottons . . . . .	44
Pre-rinse Min. iron . . . . .	44
Anti-crease. . . . .	44
Spin free of charge . . . . .	45
Coin mechanism lock . . . . .	45
Demo programme . . . . .	45
No deterg. . . . .	45
Temp. reduction. . . . .	45
Controls . . . . .	46
Delay start . . . . .	46
Settings which can only be changed during the commissioning process . . . . .	47
Payment system . . . . .	47
Supervisor level code . . . . .	47

# Commissioning the machine


---

## Before using for the first time


 Before commissioning the machine, ensure that it is correctly installed and connected. Please follow the operating and installation instructions.

 Commissioning must be completed to determine the settings for daily operation. Certain settings can only be altered during the commissioning process. After that, these can only be changed by a Miele service technician.

## Setting the language

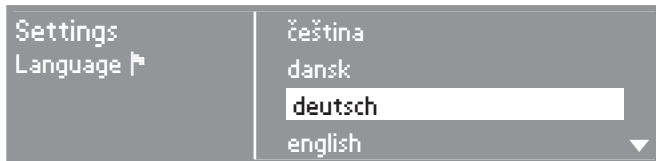

- Turn the multi-function selector to highlight the language of your choice.
- Press the multi-function selector to confirm your choice of language.

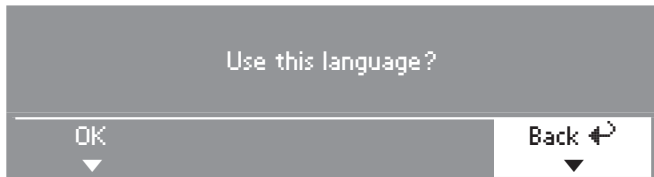

- Turn the multi-function selector to select *OK*, and confirm by pressing the multi-function selector.

If you wish to select a different language:


- Select and confirm *back*.

# Commissioning the machine


---

## To set the time of day

The time may already have been set at the factory. If it has, and is correct, you can skip this section. It is possible to alter the time at any stage via the *Settings* menu.

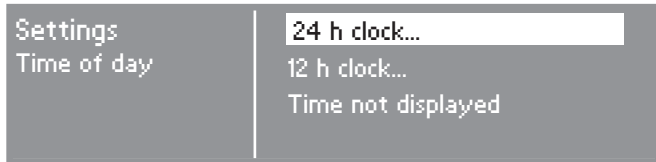

- Confirm either *24 h* or *12 h*. If you confirm *Time not displayed*, the following step will be skipped.

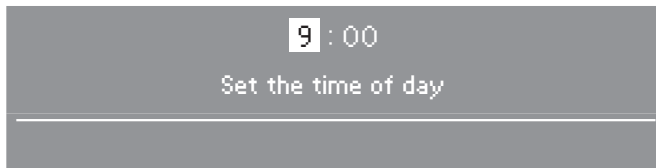


- Turn the multi-function selector to select the hour and press it to confirm your selection.
- Then set the minutes.
- Pressing the multi-function selector again saves the time of day in memory.

# Commissioning the machine

---

## Determining target groups

By selecting target groups, you are determining the programme range of the washer-extractor. You can see which programmes are assigned to each target group under "Programme chart" later in this booklet.

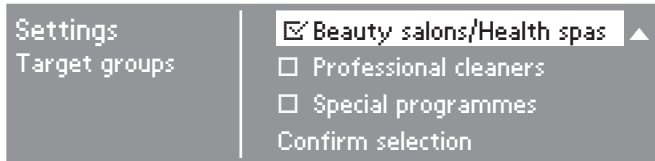

- Use the multi-function selector to select and confirm none, one or several of the target groups, as required.

The 16 pre-set *basic programmes* are always displayed and cannot be deselected.

- A target group selected will be indicated with a tick: .
- Mark the target group programmes that you have selected with a cross in the box .

- Household
- Sport
- Hotel
- Disinfection
- Hygiene
- Sluice high\*
- Bakers/Butchers
- Beauty salons/Health spas
- Professional cleaners
- Special programmes

Once you have made your selection, select *Confirm selection* and press the multi-function selector to confirm your choice.

\*only available on machines with a dump valve.

# Commissioning the machine

Each of these settings must now be confirmed (and altered if required). More details about the settings are given under "Settings menu".

Place a cross in the box  to indicate your selection, or fill in the gaps \_\_\_\_\_ as required.

See "Installation and connection - Plumbing".

## Set contrast

The contrast for the display can be set in 10 steps.

- Select the contrast for the display.

Step \_\_\_\_\_ (1 to 10)

## Set brightness

The brightness for the display can be set in 10 steps.

- Select the brightness for the display.

Step \_\_\_\_\_ (1 to 10)

## Payment system

Setting for coin-operated machines.

- Select the option you require.

No coin box

The *Lock* setting for operating the machine with a coin box is skipped.

Programme operation

The machine is operated using a coin box.

Timed operation

The machine is coin operated using a time meter.

## Pre-wash water

This setting establishes the temperature of the water for the pre-wash.

- Select:

Cold

The washer-extractor is only connected to a cold water supply. Or

Hot

The washer-extractor is connected to hot and cold water supplies.

## Main wash water

This setting establishes the temperature of the water for the main wash.

- Select:

Cold

The washer-extractor is only connected to a cold water supply. Or

Hot

The washer-extractor is connected to hot and cold water supplies.

# Commissioning the machine

---

## IK6

Serial interface RS 232 for *Interface card 6* is active in coin operation mode (an IK6 module must be fitted).

## RS 232

Serial interface RS 232 is active when the machine is operated with coins (an RS 232 module must be fitted).

## Coin mechanism lock

The *Lock* setting determines when the door is locked after the start of the programme, when operated with a coin box.

■ Select the option you want.

### Immediately

The machine locks straight away.

### in 3 minutes

The machine will lock after a period of 3 minutes (default setting)


### As soon as cancelled

The machine locks straight away. *Cancel* will appear in the display if the start button is held in for 4 seconds. You can then cancel the programme in the next 3 minutes.

### 3 min. after cancelling

The machine will lock after a period of 3 minutes. *Cancel* will appear in the display if the start button is held in for 4 seconds. You can then cancel the programme in the next 3 minutes.

## Supervisor level code

The *Settings/Supervisor level* menu can be locked with a code to prevent it being accessed by unauthorised personnel (the Language  setting can still be altered).

■ Select the option you want.

### Code not required

Only some of the settings can be changed (temporary Language setting, Suds cooling, Time of day, Display contrast, Display brightness, Standby, Memory and Temperature unit).

These settings can be changed by any user.

Other settings can only be changed by a Miele Service Technician.

### Code required

A code (000) must be entered in order to change the settings. All settings (see *Settings menu*) can be changed.

Select this option if you want users to only be able to change settings via a code.

The *Language* setting can be changed temporarily by any user.



# Commissioning the machine


## Transit bars

A message will appear in the display to remind you to remove the transport bars.

- Remove them (if this has not already been done by your fitter). Then press the multi-function selector to confirm that this has been done.

## To repeat the commissioning process

If you are not certain that all of the settings are correct, you will need to repeat the commissioning process.

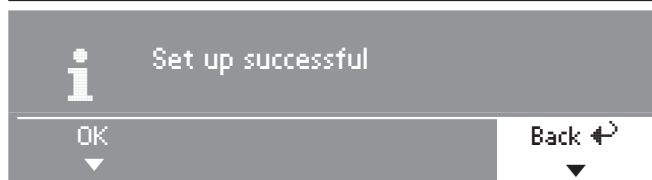


- Select *Back* and confirm your selection.

The commissioning process must then be repeated.

## To finish the commissioning process

### – 1. Confirm

If you are sure that all of the settings are correct.

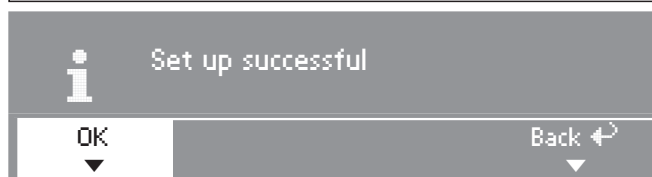


- Confirm with *OK*.


The entry menu will appear.

# Commissioning the machine

---

1	Cottons Uni.	60°C	Programme selection...
2	Minimum iron	40°C	Settings ↗...
3	Delicates	40°C	
4	Woollens 	30°C	15:00

To finish the commissioning process completely, a first wash programme must be started.

If the power to the machine is switched off before the first wash programme is started (e.g. by pressing the  button), the commissioning process can be carried out again. The commissioning process does not need to be carried out again once a wash programme that is longer than 20 minutes has been run.

## – 2. Start the first wash programme

For safety reasons, spinning is not possible until the first wash programme has been run. To activate the spinning function and to complete the commissioning process, you must run a wash programme without laundry and without detergent.

- Open the stopcocks.
- Select *Cottons 60°C* and confirm your selection.

**The main menu for *Cottons Universal* will then appear.**

- Press the flashing *Start* button.


After this programme has finished, the washer-extractor is ready for processing laundry.

## Basic programmes


<b>Cottons Hygiene</b>		<b>70°C to 95°C</b>	<b>Max. load 6.5 kg</b>
Use for	Cotton or linen fabrics, e.g. bed linen, baby clothing, underwear.		
Extra options	Pre-wash, Starch stop, Rinse hold, Intensive*, Water plus*		
Detergent	Universal detergent		
<b>Cottons Uni.</b>		<b>Cold to 60°C</b>	<b>Max. load 6.5 kg</b>
Use for	Cotton or mixed fibre garments, e.g. T-shirts, trousers.		
Note	For dark coloured fabrics use a detergent for coloured fabrics, or liquid detergent.		
Extra options	Pre-wash, Starch stop, Rinse hold, Intensive*, Water plus*		
Detergent	Universal detergent or detergent for coloured fabric		
<b>Cottons</b>		<b>40°C to 60°C</b>	<b>Max. load 6.5 kg</b>
Use for	Normally soiled cotton garments		
Note	<ul style="list-style-type: none"> <li>– These settings are the most efficient in terms of energy and water consumption for washing cottons.</li> <li>– On the 60°C setting the actual wash temperature reached will be lower than 60°C although the wash performance is the same as with the standard Cottons 60°C programme.</li> </ul>		
Extra options	Pre-wash, Starch stop, Rinse hold, Water plus*		
Detergent	Universal detergent or detergent for coloured fabric		
<b>Note for test institutes:</b>			
Test programme in accordance with EN 60456 and Energy label in accordance with EU Guideline 1061/2010			
<b>Minimum iron</b>		<b>Cold to 60°C</b>	<b>Max. load 3.5 kg</b>
Use for	Synthetic and mixed fibre garments as well as easy care cottons, e.g. shirts and blouses.		
Note	Maximum spin speed: 1200 rpm		
Extra options	Pre-wash, Starch stop, Rinse hold, Intensive*, Water plus*		
Detergent	Universal detergent or detergent for coloured fabric		

\**Intensive* and *Water plus* have to be set in the *Settings/Supervisor level* menu.

## Programme chart



<b>Delicates</b>		<b>30°C to 60°C</b>	<b>Max. load 2.5 kg</b>
Use for	Delicate synthetic, mixed fibre, rayon and easy care cotton garments.		
Note	Maximum spin speed 600 rpm		
Extra options	Pre-wash, Rinse hold, Intensive*		
Detergent	Liquid detergent for delicates		
<b>Woollens</b> 		<b>Cold to 40°C</b>	<b>Max. load 2.5 kg</b>
Use for	Machine-washable or hand-washable wool or wool blend fabrics.		
Note	Maximum spin speed 1200 rpm		
Extra options	Rinse hold		
Detergent	Liquid detergent for machine-washable woollens		
<b>Starch</b>		<b>Cold to 40°C</b>	<b>Max. load 3.5 kg</b>
Note	The laundry (table cloths, napkins, workwear) should be washed but not treated with fabric conditioner.		
Extra options	Rinse hold		
Starching agent	Liquid starch, powder starch formulations		
<b>Spin</b>			<b>Max. load 6.5 kg</b>
Use for	Articles which have been washed by hand and only need to be spun in the machine.		
Note	Please make sure you select the appropriate spin speed.		
<b>Extra rinse</b>			<b>Max. load 6.5 kg</b>
Use for	Articles which have been washed by hand and only need to be rinsed and spun in the machine.		
Note	Please make sure you select the appropriate spin speed.		
<b>Drain</b>			
	For draining water from the machine.		
<b>Quick wash</b>		<b>Cold to 40°C</b>	<b>Max. load 3.5 kg</b>
Use for	Very lightly soiled fabrics which can be washed in a <i>Cottons</i> programme.		
Extra options	Rinse hold		
Detergent	Universal detergent or detergent for coloured fabrics		

## Programme chart

<b>Silks</b> 		<b>Cold to 30°C</b>	<b>Max. load 2.5 kg</b>
Use for	Silks and other handwashable fabrics with no wool content		
Note	Place socks, tights, bras etc. in a washing bag.		
Note	Maximum spin speed: 600 rpm		
Extra options	Rinse hold, Water plus*		
Detergent	Liquid detergent for delicates		
<b>Shirts</b>		<b>Cold to 60°C</b>	<b>Max. load 2.5 kg</b>
Use for	Shirts and blouses.		
Tips	<ul style="list-style-type: none"> <li>– Pre-treat collars and cuffs if necessary.</li> <li>– Wash silk garments in the <i>Silks</i> programme.</li> </ul>		
Note	Maximum spin speed: 800 rpm		
Extra options	Starch stop, Rinse hold		
Detergent	Universal detergent or detergent for coloured fabric		
<b>Intensive wash</b>		<b>Cold to 60°C</b>	<b>Max. load 6.5 kg</b>
Use for	Heavily soiled cotton, linen and mixed fibre fabric.		
Extra option	Rinse hold		
Detergent	Universal detergent or detergent for coloured fabric		
<b>Outerwear</b>		<b>Cold to 40°C</b>	<b>Max. load 3.0 kg</b>
Use for	Microfibre outerwear such as Gore-Tex®, SYMPATEX®, WINDSTOPPER® etc.		
Tips	<ul style="list-style-type: none"> <li>– Zip up jackets before washing.</li> <li>– Do not use fabric conditioner.</li> </ul>		
Note	Maximum spin speed: 900 rpm		
Extra options	Starch stop, Rinse hold		
Detergent	Liquid detergent for delicates, or specialist detergent.		

\**Intensive* and *Water plus* have to be set in the *Settings/Supervisor level* menu.

# Programme chart

<b>Proofing</b>		<b>Cold to 40°C</b>	<b>Max. load 3.0 kg</b>
Use for	Treating microfibre fabrics, ski wear, fine closeweave cotton garments (poplin) or tablecloths with a water and dirt resistant finish.		
Tips	<ul style="list-style-type: none"> <li>– The items should be colour sorted and freshly laundered and spun or dried before proofing.</li> <li>– For best results, they should be heat-treated afterwards, either in a tumble dryer or by ironing.</li> </ul>		
Note	Maximum spin speed: 1000 rpm		
Extra options	Starch stop, Rinse hold		
Proofing agents	<ul style="list-style-type: none"> <li>– Only use proofing agents containing fluorochemical compounds which are stated by the manufacturer as being "suitable for use on membrane textiles". <b>Do not use</b> proofing agents which contain paraffin.</li> <li>– Add proofing agents to the fabric conditioner compartment .</li> </ul>		
<b>Towelling</b>		<b>Cold to 95°C</b>	<b>Max. load 6.5 kg</b>
Use for	Towels and towelling garments such as dressing-gowns		
Tip	For dark coloured fabrics use a detergent for coloured fabrics.		
Extra options	Pre-wash, Starch stop, Water plus*		
Detergent	Universal detergent		
<b>Express</b>		<b>Cold to 60°C</b>	<b>Max. load 3.5 kg</b>
Use for	Small loads of items which require freshening up and which can be washed in a <i>Cottons Universal</i> programme.		
Extra option	Rinse hold		
Detergent	Universal detergent		
<b>Maintenance programme</b>		<b>No laundry</b>	
	For cleaning the suds container and the drainage system. <ul style="list-style-type: none"> <li>– Add universal detergent to compartment .</li> <li>– If you use disinfection programmes on a regular basis, the <i>Maintenance prog.</i> should be frequently carried out.</li> </ul>		

## Household

<b>Dark garments</b>		<b>Cold to 40°C</b>	<b>Max. load 3.5 kg</b>
Use for	Dark garments made from cotton or mixed fibre.		
Tip	Wash inside out.		
Note	Maximum spin speed: 1000 rpm		
Extra option	Rinse hold		
Detergent	Liquid detergent for coloured fabrics		
<b>Denim</b>		<b>Cold to 40°C</b>	<b>Max. load 3.5 kg</b>
Tips	<ul style="list-style-type: none"> <li>– Wash denim inside out.</li> <li>– Denim often contains excess dye and may run during the first few washes. Wash light and dark coloured items separately.</li> </ul>		
Note	Maximum spin speed: 1000 rpm		
Extra option	Rinse hold		
Detergent	Liquid detergent for coloured fabrics		

# Programme chart

---

## Sport

<b>Indoor sportswear</b>		<b>Cold to 40°C</b>	<b>Max. load 3.0 kg</b>
Use for	Sport and fitness clothing such as shorts and tops made from synthetic or mixed fibre.		
Note	Maximum spin speed: 800 rpm		
Extra option	Rinse hold		
Detergent	Liquid detergent for delicates		
<b>Outdoor sportswear</b>		<b>Cold to 60°C</b>	<b>Max. load 3.0 kg</b>
Use for	Sportswear made of synthetic or mixed fibre, or membrane textiles which require reproofing at the same time		
Tip	Add a suitable proofing agent to the fabric conditioner compartment		
Note	Maximum spin speed: 1000 rpm		
Extra options	Pre-wash, Starch stop, Rinse hold, Intensive*		
Detergent	Universal detergent or detergent for coloured fabric		
<b>Hard objects</b>		<b>Cold to 60°C</b>	<b>Max. load 3.0 kg</b>
Use for	Washable plastic items, e.g. shin pads, protectors and riding safety vests or sport shoes		
Note	Maximum spin speed: without spin		
Extra options	Pre-wash, Rinse hold		
Detergent	Liquid detergent for delicates		

\**Intensive* and *Water plus* have to be set in the *Settings/Supervisor level* menu.



# Programme chart

## Hotel

<b>Kitchen linen</b>		<b>40°C to 95°C</b>	<b>Max. load 6.5 kg</b>
Use for	Kitchen linen made from cotton and linen fabric, e.g. chef's whites, catering uniforms, serving cloths, cleaning cloths.		
Tip	Select <i>Pre-wash</i> for stubborn soiling. Use a detergent containing enzymes for the pre-wash.		
Notes	Includes a pre-rinse to remove coarse soiling.		
Extra options	Pre-wash, Rinse hold		
Detergent	Universal detergent		
<b>Table linen</b>		<b>30°C to 60°C</b>	<b>Max. load 3.5 kg</b>
Use for	Cotton, linen and mixed fibre table linen, such as tablecloths and napkins.		
Tip	Select <i>Pre-wash</i> for stubborn soiling. Use a detergent containing enzymes for the pre-wash.		
Notes	<ul style="list-style-type: none"> <li>– Soaking will help disperse stains (enzyme phase).</li> <li>– Maximum spin speed: 1000 rpm</li> </ul>		
Extra options	Pre-wash, Starch stop, Rinse hold, Intensive*, Water plus*		
Detergent	Universal detergent		
<b>Curtains</b>		<b>Cold to 40°C</b>	<b>Max. load 2.5 kg</b>
Use for	Curtains, including net curtains, specified as machine-washable by the manufacturer.		
Tips	<ul style="list-style-type: none"> <li>– Select <i>Without spin</i> for curtains which crease easily.</li> <li>– Includes a pre-rinse to remove dust.</li> </ul>		
Note	Maximum spin speed: 800 rpm		
Extra options	Pre-wash, Rinse hold		
Detergent	Specialist curtain detergent, universal detergent or detergent for coloured fabric, in powder form		

\**Intensive* and *Water plus* have to be set in the *Settings/Supervisor level* menu.

## Programme chart

<b>Delicate curtains</b>		<b>Cold to 40°C</b>	<b>Max. load 2.5 kg</b>
Use for	Curtains, including net curtains, specified as machine-washable by the manufacturer.		
Tip	Select <i>Without spin</i> for curtains which crease easily.		
Note	Maximum spin speed: 600 rpm		
Extra options	Pre-wash, Rinse hold		
Detergent	Specialist curtain detergent, universal detergent or detergent for coloured fabric, in powder form		
<b>Bed linen</b>		<b>40°C to 95°C</b>	<b>Max. load 6.5 kg</b>
Use for	Cotton and mixed fibre bed linen.		
Tip	For dark coloured fabrics use a detergent for coloureds.		
Extra option	Rinse hold		
Detergent	Universal detergent or detergent for coloured fabric		
<b>Pillows</b>		<b>Cold to 60°C</b>	<b>2 pillows (40 x 80 cm) or 1 pillow (80 x 80 cm)</b>
Use for	Pillows with feather, down or synthetic fillings.		
Note	A spin cycle is carried out after water is first added in order to deflate the pillows.		
Extra option	Rinse hold		
Detergent	Liquid detergent		

## Disinfection

<b>Therm.DIS 15min      85°C</b>		<b>Max. load 6.5 kg</b>
Use for	Cotton and mixed fibre fabrics.	
Note	<ul style="list-style-type: none"> <li>– Thermal disinfection.</li> <li>– The wash cycle is followed by a disinfection phase at 85°C, with a holding time of 15 minutes.</li> <li>– The <i>Without spin</i> setting is not possible.</li> </ul>	
Extra options	Pre-wash	
Detergent	Specially formulated detergent (containing bleach)	
<b>CTh. DIS 10min      70°C</b>		<b>Max. load 6.5 kg</b>
<b>CTh. DIS 20 min      60°C</b>		
<b>CTh. DIS 20min      40°C</b>		
Use for	Cotton and mixed fibre fabrics.	
Note	<ul style="list-style-type: none"> <li>– Chemo-thermal disinfection programmes with different temperatures and holding times.</li> <li>– The <i>Without spin</i> setting is not possible.</li> </ul>	
Extra options	Pre-wash	
Detergent	Specially formulated detergent (registered detergents and disinfectants; disinfection standards operating in your country must be observed).	

# Programme chart

## Hygiene

Hygiene	No laundry
<p><i>Hygiene</i> will appear in the display if the last programme selected used a temperature below 55°C or if the <i>Spin</i> programme is selected. You should then run a programme that uses a temperature of at least 60°C or the <i>Hygiene</i> programme.</p>	
<p>To select the Hygiene programme:</p> <ul style="list-style-type: none"> <li>– Do not put any laundry into the drum, add a little detergent to compartment <b>III</b> and start the programme, <b>or</b></li> <li>– Select a wash programme with a temperature higher than 60°C.</li> </ul> <p>If you ignore this advice, the next programme will run as usual, and the <i>Hygiene</i> instruction will appear in the display again at the end of the programme.</p>	

## Sluice high\*

Sluice low	65°C	Max. load 4.0 kg
Sluice high	75°C	
Use for	Heavily soiled cotton, linen or mixed fibre fabrics, e.g. nappies.	
Note	<ul style="list-style-type: none"> <li>– Includes two pre-rinses to remove coarse soiling.</li> <li>– Maximum spin speed 1400 rpm</li> <li>– The <i>Without spin</i> setting is not possible.</li> <li>– (The Sluice programmes conform to Health Service Guideline HSG(95)18)</li> </ul>	
Detergent	Universal detergent	
MRSA plus	40°C	Max. load 4.0 kg
Use for	Synthetic, mixed fibre and easy care cotton fabrics.	
Note	<ul style="list-style-type: none"> <li>– Add disinfectant that is active against MRSA to the fabric conditioner compartment <b>⊗</b>.</li> <li>– Maximum spin speed 1000 rpm</li> <li>– The <i>Without spin</i> setting is not possible.</li> <li>– The MRSA plus programme conforms to the British Standard.</li> </ul>	
Detergent	Universal detergent	

\*only available on machines with a dump valve.

## Bakers/Butchers

<b>Flour</b>		<b>40°C to 95°C</b>	<b>Max. load 6.5 kg</b>
<b>Flour +</b>		<b>40°C to 95°C</b>	
Use for	Workwear, jackets, hats and cloths made from cotton or mixed fibres.		
Note	<ul style="list-style-type: none"> <li>– Use a detergent containing enzymes.</li> <li>– Select the <i>Flour +</i> programme for heavy soiling.</li> </ul>		
Note	Includes a pre-rinse to remove coarse soiling.		
Extra options	Pre-wash, Rinse hold		
Detergent	Universal detergent		
<b>Grease and fat</b>		<b>40°C to 80°C</b>	<b>Max. load 6.5 kg</b>
<b>Grease and fat +</b>		<b>40°C to 95°C</b>	
Use for	Workwear, jackets, hats and cloths made from cotton or mixed fibre.		
Note	<ul style="list-style-type: none"> <li>– Use a detergent containing enzymes.</li> <li>– Select the <i>Grease and fat +</i> programme for heavy soiling, and use a specialist liquid detergent.</li> </ul>		
Note	Includes a pre-rinse to remove coarse soiling.		
Extra options	Pre-wash, Rinse hold		
Detergent	Universal detergent		
<b>Workwear</b>		<b>40°C to 80°C</b>	<b>Max. load 6.5 kg</b>
<b>Workwear +</b>		<b>60°C to 95°C</b>	
Use for	Heavily soiled workwear, trousers, jackets made from cotton or mixed fibre		
Note	<ul style="list-style-type: none"> <li>– Use a detergent with enzymes for the pre-wash.</li> <li>– Select the <i>Workwear +</i> programme for heavy soiling, and use a specialist liquid detergent.</li> </ul>		
Extra options	Pre-wash, Rinse hold		
Detergent	Universal detergent		



# Programme chart

---

## Beauty salons/Health spas

<b>Towels</b>		<b>Cold to 40°C</b>	<b>Max. load 5.5 kg</b>
Use for	Lightly soiled cotton towels		
Tip	For dark coloured fabrics use a detergent for coloured fabrics.		
Extra option	Rinse hold		
Detergent	Universal detergent		
<b>Towels+</b>		<b>40°C to 80°C</b>	<b>Max. load 5.5 kg</b>
Use for	Heavily soiled cotton towels		
Tip	For dark coloured fabrics use a detergent for coloured fabrics.		
Extra options	Pre-wash, Rinse hold		
Detergent	Universal detergent		
<b>Capes</b>		<b>Cold to 30°C</b>	<b>Max. load 2.0 kg</b>
Use for	Lightly soiled capes made from synthetic fibres		
Note	Maximum spin speed: 600 rpm		
Extra option	Rinse hold		
Detergent	Liquid detergent for delicates		

## Professional cleaners

<b>WetCare sensitive Cold to 25°C</b>		<b>Max. load 4.0 kg</b>
Use for	Clothing such as suits and jackets which is not washable and which is marked with the  or  symbols.	
Note	<ul style="list-style-type: none"> <li>– After wet cleaning, items are treated in a finishing bath.</li> <li>– A liquid finishing agent should be used; this should be added to the fabric conditioner compartment.</li> <li>– Maximum spin speed 1100 rpm</li> </ul>	
Extra options	Rinse hold	
Detergent	Specialist liquid detergent	
<b>WetCare silks Cold to 30°C</b>		<b>Max. load 3.0 kg</b>
Use for	Items which are not washable and which are susceptible to creasing and silk garments.	
Note	<ul style="list-style-type: none"> <li>– After wet cleaning, items are treated in a finishing bath.</li> <li>– A liquid finishing agent should be used; this should be added to the fabric conditioner compartment.</li> <li>– Maximum spin speed 600 rpm</li> </ul>	
Extra options	Rinse hold	
Detergent	Specially formulated detergent	
<b>WetCare intensive 30°C to 40°C</b>		<b>Max. load 4.0 kg</b>
Use for	Heavily soiled clothing which is not washable.	
Note	<ul style="list-style-type: none"> <li>– After wet cleaning, items are treated in a finishing bath.</li> <li>– A liquid finishing agent should be used; this should be added to the fabric conditioner compartment.</li> <li>– Maximum spin speed 1100 rpm</li> </ul>	
Extra options	Pre-wash, Rinse hold	
Detergent	Specially formulated detergent	





## Relay control for external dispensing system

The washer-extractor is fitted with an adapter for an external dispensing system. The external pumps are controlled by relays in the washer-extractor. The dispensing containers must be filled with the correct detergent or additive in the order specified. **Do not use** any detergents or agents containing chloride or acids.

	Pre-wash	Main wash	Fabric conditioner	Finishing agent
<b>Basic programmes</b>				
Cottons Hygiene	R 1	R 2 + R 5	R 4	-
Cottons Uni.	R 1	R 2 + R 5	R 4	-
Cottons	R 1	R 2	R 4	-
Minimum iron	R 1	R 2	R 4	-
Delicates	R 3	R 3	R 4	-
Woollens	-	R 3	R 4	-
Quick wash	-	R 2	R 4	-
Silks	-	R 3	R 4	-
Shirts	-	R 2	R 4	-
Intensive wash	-	R 2	R 4	-
Outerwear	-	R 2	R 6	-
Proofing	-	-	-	R 6
Towelling	-	R 2 + R 5	R 4	-
Express	-	R 2	R 4	-
<b>Household</b>				
Dark garments	-	R 2	R 4	-
Denim	-	R 2	R 4	-

R 1 = Relay 1 = Pre-wash detergent

R 2 = Relay 2 = Main wash detergent

R 3 = Relay 3 = Liquid detergent for delicates or WetCare agent

R 4 = Relay 4 = Fabric conditioner or finishing agent

R 5 = Relay 5 = Bleach/disinfectant

R 6 = Relay 6 = Proofing agent/MRSA

## Relay control for external dispensing system

	Pre-wash	Main wash	Fabric conditioner	Finishing agent
<b>Sport</b>				
Indoor sportswear	-	R 3	R 4	-
Outdoor sportswear	R 1	R 3	-	R 6
Hard objects	-	R 3	R 4	-
<b>Hotel</b>				
Kitchen linen	R 1	R 2 + R 5	R 4	-
Table linen	R 1	R 2 + R 5	R 4	-
Curtains	R 3	R 3	R 4	-
Delicate curtains	R 3	R 3	R 4	-
Bed linen	-	R 2 + R 5	R 4	-
Pillows	-	R 2	R 4	-
<b>Disinfection</b>				
Therm.DIS 15min	R 1	R 2 + R 5	R 4	-
CTh. DIS 20 min	R 1	R 2 + R 5*	R 3	-
<b>Hygiene</b>				
Hygiene	-	R 2	-	-
<b>Sluice high</b>				
Sluice sensitiv / Sluice high	-	R 2 + R 5	R 4	-
MRSA plus	-	R 2	R 6	-

R 1 = Relay 1 = Pre-wash detergent

R 2 = Relay 2 = Main wash detergent

R 3 = Relay 3 = Liquid detergent for delicates or WetCare agent

R 4 = Relay 4 = Fabric conditioner or finishing agent

R 5 = Relay 5 = Bleach/disinfectant

R 6 = Relay 6 = Proofing agent/MRSA

\* Agent dispensed via R 5 once the correct temperature has been reached.

## Relay control for external dispensing system

	Pre-wash	Main wash	Fabric conditioner	Finishing agent	
<b>Bakers/Butchers</b>					
Flour	R 1	R 2	R 4	-	
Flour+	R 1	R 2	R 4	-	
Grease and fat	R 1	R 2 + R 5	R 4	-	
Grease and fat+	R 1	R 2 + R 5	R 4	-	
Workwear	R 1	R 2 + R 5	R 4	-	
Workwear+	R 1	R 2 + R 5	R 4	-	
<b>Beauty salons/Health spas</b>					
Towels	-	R 2 + R 5	R 4	-	
Towels+	R 1	R 2 + R 5	R 4	-	
Capes	-	R 2	R 4	-	
<b>Professional cleaners</b>					
WetCare sensitive	-	R 3	-	R 4	
WetCare silks	-	R 3	-	R 4	
WetCare intensive	R 3	R 3	-	R 4	
	<b>Pre-wash</b>		<b>Main wash</b>		<b>Rinse 4</b>
<b>Special programmes</b>					
	gentle	normal/ intensive	gentle	normal/ intensive	
Special 1, 2, 3	R 3	R 1	R 3	R 2 + R 5	R 4
Special 4, 5	R 3	R 1	R 3	R 2	R 4

R 1 = Relay 1 = Pre-wash detergent

R 2 = Relay 2 = Main wash detergent

R 3 = Relay 3 = Liquid detergent for delicates or WetCare agent

R 4 = Relay 4 = Fabric conditioner or finishing agent


R 5 = Relay 5 = Bleach/disinfectant

R 6 = Relay 6 = Proofing agent/MRSA




## Changing default settings

Default settings can be altered to adapt the machine to different requirements.

Depending on the programmable status, the *Settings/Supervisor level* menu can be locked with a code to prevent it being accessed by unauthorised personnel (the Language  setting can still be altered).

– Code not required

Some settings are visible and can be changed by all operators via the *Settings*  menu.

– Code required

All settings may be changed upon entering a code (*Settings/Supervisor level* menu)

**Please contact the Miele Service Department for details.**


### Note regarding the commissioning of the machine


The machine must be commissioned as described at the beginning of this booklet.

# Settings menu

## To open the Settings menu

If the Settings menu is not locked (Code not required), some of the settings may be changed.

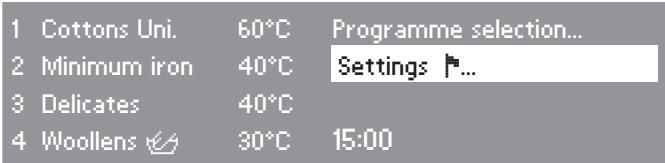

- Select *Settings*  from the entry menu and confirm your selection with the multi-function selector.

## To select a setting



- Select the setting you want to change, and confirm your selection.

If you do not make a selection in the sub-menu within approx. 15 seconds, the display will revert to the *Settings* menu.

## Language

A different language setting will only apply to the programme currently in use. After the programme has finished the display will revert to the default language which was set in the *Settings/Supervisor level* menu.

## To close the Settings menu


Select *Back* and confirm your selection. The display will return to the entry menu.

# Settings/Supervisor level menu


## To open the Settings/Supervisor level menu

The *Settings* menu can be locked against unauthorised use (except for the *Language* option). It will then only be able to be accessed at Supervisor level by entering a code.

## To select a setting

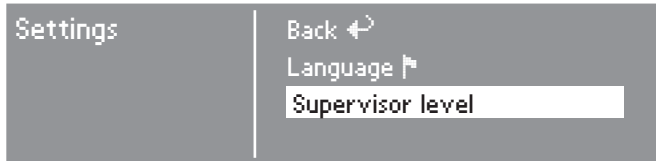

- Select *Supervisor level* and confirm your selection.

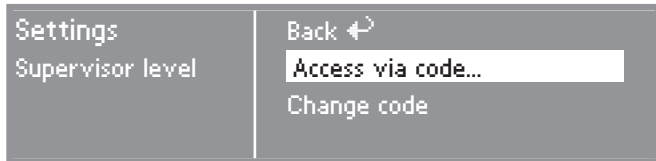

- Select *Access via code* and confirm your selection.

## To enter the code

Enter the digits **0 0 0** (factory default setting). If you enter the code wrongly three times, the machine will lock out for an hour.



- Turn the multi-function selector until the first number appears. Then press it to confirm your selection of this number. Now enter the second number.
- Repeat the process until all three numbers have been entered.

# Settings/Supervisor level menu

---

## To confirm the code



- Confirm the code you have entered.




You are now in Supervisor level.

You can alter the code if you want to prevent it being accessed by unauthorised personnel (see Settings, *Supervisor level*).



## Language

The display can be set to appear in one of several different languages.

To select the language you want, go to the *Languages*  sub-menu.

- If the language shown is not the one you want turn the multi-function selector to highlight the one that you do want and confirm your selection.

The flag after the word *Language* acts as a guide to prevent a language which will not be understood from being set.

If after setting a new language no further entries are made for approx. 15 seconds the display will revert to the previously set language.

### To close the Settings menu

Select *Back* and confirm your selection. The display will return to the entry menu.

## Sort languages

You can select the order that you want the languages available to appear in in the display if you have first selected the *International* or *International, 4 langs.* option from the *Language menu* in the Settings menu.

## Suds cooling

When this is activated, additional water flows into the drum at the end of the main wash to cool the suds down. Hot suds can damage plastic drainage pipes.

Suds cooling takes place when temperatures above 70°C are selected.

Suds cooling should be activated:

- where the drainage pipes do not comply with DIN 1986.

The machine is delivered with Suds cooling activated.

# Settings/Supervisor level menu

---

## Time of day

First select whether you want the clock displayed as a 24 hour or 12 hour clock, or to not display it at all. Then set the current time of day.

If you select to not display the clock, the Timer can be used to delay the start by up to 24 hours, i.e. it will show how many hours until the start but not the current time of day.

### To select a 24 hour or 12 hour clock

- Select the clock option you want and confirm your selection.

The display will then change to the screen for setting the time of day.

### To set the time of day

- Use the multi-function selector to select the hour and confirm your selection. Now set the minutes. Pressing the multi-function selector again saves the time of day in memory.

## Supervisor level

You can alter the access code to the supervisor level.

- Enter the old code.
- Enter a new code.

After you have confirmed the new code, the display will change to the beginning of the *Settings* menu.

## Display contrast/Display brightness

There are ten different display contrast and brightness settings.

The display contrast/brightness will change as soon as a different setting is chosen.

- Confirm your selection with the multi-function selector.

# Settings/Supervisor level menu

---

## Standby

To save energy, the display goes out after 10 minutes and the *Start* button flashes slowly.

Operating the multi-function selector or one of the short cut buttons switches the display back on again.

You have 3 options:

### On

Standby comes on:

- if a programme is not selected after the machine has been switched on.
- after a programme has started.
- after the end of a programme.

Not in current prog. (the machine is delivered with this option selected)

Standby comes on:

- if a programme is not selected after the machine has been switched on.

### Off

The display remains on all the time.

## Memory

If an extra option has been selected for a programme, or the recommended temperature or spin speed has been altered, the machine will store the changes in memory at the start of a programme.

The next time this programme is selected these settings will appear in the *Programme selection* menu.

The memory function is not active when favourite programmes are selected using the short cut buttons.

The machine is delivered with the memory function deactivated.

## Temperature unit

You can choose for the temperature to be displayed in °C/*Celsius* or °F/*Fahrenheit*.

The machine is delivered with the °C option selected.

# Settings/Supervisor level menu

---

## Special programmes

You can create 5 special programmes and save these as favourite programmes with their own names.


The special programmes are pre-programmed with basic settings.

- Wash temperature: cold
- Spin speed: without spin
- Wash block: Main wash: short
- Extra options cannot be selected

Saving your options to memory and creating individual programmes is described in the next few pages.


### To create a special programme

*Special programmes* must first be activated under the *Target groups* setting.

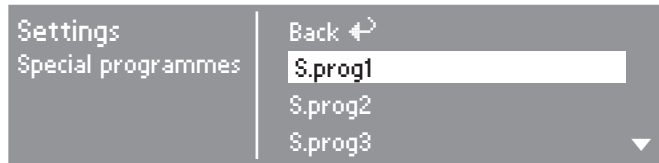

- Select *S.Prog 1, 2, 3, 4 or 5*

### 1. To save the programme name

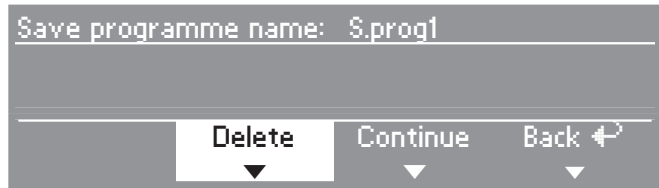

- Confirm *Delete* to change the programme name.

# Settings/Supervisor level menu

---

- Confirm *Delete* again until the symbols you wish to delete have been removed.



- Turn the multi-function selector to move the cursor to the symbol line.
- Using the multi-function selector, select and confirm each letter or symbol in turn to create the programme name.  
A maximum of 7 characters may be entered.

## abc/ABC

To select lower or upper case letters (short-cut button 1)

## Delete

Deletes the last character entered (short-cut button 2)

## Continue

To finish entering text (short-cut button 3)  
To go directly to the programme creation menu (see below)

## Back

Back to the level above (short-cut button 4)

# Settings/Supervisor level menu

---

## 2. Programme creation menu

You can choose the programme's features by changing the basic settings.

Enter the names of your special programmes and their basic settings into the "Special programmes" table in the "Programme chart".



### Temperature

- The temperature can be selected in 5°C steps from cold to 95°C.

### Spin speed

- The spin speed is selected in steps of 100 from *Without spin* to 1400 rpm.

### Wash block

- One or more wash blocks can be selected.
- To save the special programme, select "Confirm selection" at the end of the list.
- Select *Back*. The programme will now appear in the *Programme selection* menu.

# Settings/Supervisor level menu

## Favourites

You can configure the 12 programmes in the basic menu for machine variant *Shortcut keys + Logo* (only in conjunction with *Controls* setting *Shortcut keys + Logo*).

You can choose programmes from the machine's complete range of programmes. The first three programmes listed will be allocated to shortcut keys 1 to 3.

How to change a programme in the list:

- Select *Favourites and confirm your selection*.
- Select a programme from the list.
- Change one or more components (programme name, temperature, spin speed, pre-wash).
- Press short cut button  Save.

The programme is saved in the list.

## Logo

You can choose whether to have the "Miele Professional" logo or one of your own in the display. (The control option *Shortcut keys + Logo* has to be selected).

The "Miele Professional" logo appears as the default.

## Language menu

You can select whether you want an additional welcome screen asking for a language to be selected to appear again after the end of a washing programme and before the entry menu.

You have 3 options:

national

The welcome screen does not appear (default setting).

international

The welcome screen will appear and the language must then be selected. Any available language can be selected. Follow the *Sort languages* setting.

International, 4 langs.

The welcome screen will appear and the language must then be selected. One of four languages can be selected. Follow the *Sort languages* setting.

# Settings/Supervisor level menu

---

## Intensive water plus

You can choose whether you want the *Intensive* and *Water plus* extra options to be available for selection in the Extras menu.

The machine is delivered with this setting deactivated (deselected).

## Water plus

This setting is used to select the water intake setting for the *Water plus* extra option.

You have 3 options:

### Water plus

The water level is increased in the wash and rinse stages of the *Cottons hygiene*, *Cottons universal*, *Minimum iron*, *Silks* and *Table linen* programmes (default setting).

### Extra rinse

An extra rinse is introduced in the *Cottons hygiene*, *Cottons universal* and *Minimum iron* programmes.

### Water plus and Extra rinse

The water level is increased in the wash and rinse stages of the *Cottons hygiene*, *Cottons universal*, *Minimum iron*, *Silks* and *Table linen* programmes and an extra rinse is also introduced in the *Cottons hygiene*, *Cottons universal* and *Minimum iron* programmes.

## Save

You can choose whether you want the Save option to appear in the main menu. The save function is required if, for example, you want to change the favourite wash programmes which have been saved to the short cut buttons.

The machine is delivered with this option deactivated.

## Auto load control

The machine has auto load control. The water level and the programme durations are adjusted in some programmes according to the load. If the auto load control is deactivated, the machine will always carry out the programme sequence based on a full load.

The machine is delivered with this option activated.

## Pre-wash water

You can select hot or cold water for the pre-wash. Hot water can only be taken in if the wash temperature is above 30°C.

This setting is confirmed when the machine is commissioned.



## Main wash water

You can select hot or cold water for the main wash. Hot water can only be taken in if the wash temperature is above 30°C.

This setting is confirmed when the machine is commissioned.

The machine will need to be set up specifically for *Grey water* if this option is selected.

## Rinse water

You can select hot or cold water for the final rinse. Hot water can only be taken in if the wash temperature is above 50°C.

The machine is delivered with the *Cold* water option selected.

The machine will need to be set up specifically for *Grey water* if this option is selected.

## Low water pressure

This setting can be activated to ensure problem free water intake where the water pressure is constantly low (below 100 kPa).

The machine is delivered with the *No* option activated.

## Empty sensor

You can activate the *Empty sensor* option for the external liquid detergent containers so that a message appears in the display when a container is empty.

The factory default setting is *No* (no empty sensor).

# Settings/Supervisor level menu

---

## Water level Cottons

You can increase the water level for the main wash in the *Cottons hygiene* and *Cottons universal* programmes.

The machine is delivered with the Block parameters option selected (the water level will be controlled according to the data programmed on-site).

## PW temp. Cottons

You can select the temperature you want the pre-wash to be carried out at in the *Cottons hygiene* and *Cottons universal* programmes.

The machine is delivered with the Block parameters option selected (the water level will be controlled according to the data programmed on-site).

## Water level Min. iron

You can increase the water level for the main wash in the *Minimum iron* programme.

The machine is delivered with the Block parameters option selected (the water level will be controlled according to the data programmed on-site).

# Settings/Supervisor level menu

## PW duration Cottons

The pre-wash duration can be changed in the *Cottons hygiene* and *Cottons universal* programmes.

The machine is delivered with the Block parameters option selected (the wash duration will be controlled according to the data programmed on-site).

## Wash time Cottons

You can increase the wash duration for the main wash in the *Cottons hygiene* and *Cottons universal* programmes.

The machine is delivered with the Block parameters option selected (the wash duration will be controlled according to the data programmed on-site).

## Wash time Min. iron

You can increase the wash duration for the main wash in the *Minimum iron* programme.

The machine is delivered with the Block parameters option selected (the wash duration will be controlled according to the data programmed on-site).

## No. of programmes

This option is visible in the display but not available on this machine.

## Target groups

You can extend your choice of programmes by activating target group programmes.

The target group programmes selected will be added to the basic programmes. Further information can be found in "Programme chart".

- Household
- Sport
- Hotel
- Disinfection
- Hygiene
- Sluice high\*
- Bakers/Butchers
- Beauty salons/Health spas
- Professional cleaners
- Special programmes

Only once you have made your selection, select *Confirm selection* and confirm.

\*only available on machines with a dump valve.

# Settings/Supervisor level menu

---

## Pre-wash

You can choose for pre-wash to be carried out with every *Cottons hygiene*, *Cottons universal* and *Minimum iron* programme or to select it each time via the Extras menu.

The machine is delivered with the *Select via prog. menu* option activated.

## No. rinses Cottons

You can alter the number of rinses which are carried out in the *Cottons hygiene* and *Cottons universal* programmes.

- 2 rinses (factory default setting)
- 3 rinses
- 4 rinses
- 5 rinses


## No. rinses Min. iron

You can alter the number of rinses which are carried out in the *Minimum iron* programme.

- 2 rinses (default setting)
- 3 rinses
- 4 rinses

## No. rinses Disin.

An additional rinse using hot water can be activated in the *Chemo thermal disinfection* and *Thermal disinfection* programmes.

 Take care when removing the laundry at the end of the cycle as it may still feel hot.

The machine is delivered with this option deactivated.

## Pre-rinse Cottons

A pre-rinse can be carried out in the *Cottons hygiene* and *Cottons universal* programmes.

The machine is delivered with this option deactivated.

## Pre-rinse Min. iron

A pre-rinse can be carried out in the *Minimum iron* programme.

The machine is delivered with this option deactivated.

## Anti-crease

Anti-crease helps prevent creasing if laundry is not normally removed immediately after the end of a programme. The drum will turn at intervals for up to 30 minutes after the programme has finished.

The machine is delivered with this option activated.

# Settings/Supervisor level menu

## Spin free of charge

If your machine is fitted with a payment system, you can release the *Spin* programme (Free of charge).

The machine is delivered with this option deactivated.

## Coin mechanism lock

If your machine is fitted with a payment system, you can activate the lock immediately after the start of the programme, or three minutes after it has started.

You have four options:

immediately

The machine locks straight away.

in 3 minutes

The machine will lock after a period of 3 minutes (default setting)

as soon as cancelled

The machine locks straight away.

*Cancel* will appear in the display if the start button is held in for 4 seconds.

You can then cancel the programme in the next 3 minutes.

3 min. after cancelling

The machine will lock after a period of 3 minutes. *Cancel* will appear in the display if the start button is held in for 4 seconds. You can then cancel the programme in the next 3 minutes.

## Demo programme

This can be used by dealers to demonstrate the machine in their showrooms.

When *On* is selected, the machine can be used, depending on its programmable status, but it is not possible to start a programme.

## No detergent.

If your machine is fitted with an external dispensing system, the system will not be used when *No detergent* is selected. You can choose whether or not you want *No detergent* to appear as an option in the *Extras* menu.

The machine is delivered with this option deactivated.

## Temp. reduction

At altitudes over 3000 m the suds temperature for the Cottons programmes can be reduced by 5°C to prevent it boiling too early.

The machine is delivered with this function deactivated.

# Settings/Supervisor level menu

---

## Controls

You can change the way the machine is used with this setting.

**Caution:** If "WS with short cut keys" or "Short cut keys + Logo" mode has been selected the *Settings* menu is not accessible after exiting the *Settings/Supervisor level* menu. You cannot then get back into *Supervisor level*. If you need to access it please contact the Miele Service Department.

### D with short cut keys

(default setting)

### D without short cut keys

Limited range of programmes available, operation is only possible via the multi-function selector.

### WS with shortcut keys

There are 4 pre-set (Favourite) programmes only available. These cannot be altered by the user.

- Before activating this setting you must first select the 4 favourite programmes. See the separate booklet supplied with the machine for details under "Select a programme - Saving a favourite programme".

### Shortcut keys + Logo

Special version for laundrettes.

To configure programmes for the basic menu on variant *Shortcut keys + Logo* go to *Favourite programmes*. You can use your own logo. Follow the *Logo* setting.

## Delay start

Using the timer you can set the time you wish the programme to finish at (see the *Timer* section). The timer can be set to *active* or *inactive*.

The default setting is *inactive*. If the *Timer* button is pressed the display will only show the programme duration, the time the programme is estimated to finish at and the current time of day.

## To close the Settings menu

- Select *Back* and confirm your selection. The display will return to the entry menu.

## Settings which can only be changed during the commissioning process

If you wish to change any of these settings at a later stage, please contact the Miele Service Department.

### Payment system

A coin box needs to be fitted.

#### – No coin box

#### – Programme operation

The machine is operated using a coin box. The user purchases a wash programme.

#### – Timed operation

The machine is coin-operated using a time meter. The user purchases a time-controlled programme.


#### – RS 232

Serial interface RS 232 is active when the machine is operated with coins (an RS 232 module must be fitted).

#### – IK6

Serial interface RS 232 is active in IK6 mode when the machine is operated with coins (an IK6 and RS 232 module must be fitted).

### Supervisor level code

The *Settings/Supervisor level* menu can be locked with a code to prevent it being accessed by unauthorised personnel (the Language  setting can still be altered).

#### – Code not required

Only some of the settings can be changed (temporary Language setting, Suds cooling, Time of day, contrast, brightness, standby, memory and temperature unit).

These settings can be changed by any user.

#### – Code required

A code must be entered in order to change the settings. All of the settings may be changed.

Select this option if you only want users to be able to change settings via a code.

## United Kingdom

Miele Co. Ltd.  
Fairacres, Marcham Road  
Abingdon, Oxon, OX14 1TW  
Customer Contact Centre Tel: 0330 160 6600  
E-mail: mielecare@miele.co.uk  
Internet: www.miele.co.uk

## Australia

Miele Australia Pty. Ltd.  
ACN 005 635 398  
ABN 96 005 635 398  
1 Gilbert Park Drive, Knoxfield, VIC 3180  
Tel: 1300 464 353  
Internet: www.miele.com.au

## China

Miele (Shanghai) Trading Ltd.  
1-3 Floor, No. 82 Shi Men Yi Road  
Jing' an District  
200040 Shanghai, PRC  
Tel: +86 21 6157 3500, Fax: +86 21 6157 3511  
E-mail: info@miele.cn, Internet: www.miele.cn

## Miele (Hong Kong) Limited

41/F - 4101, Manhattan Place  
23 Wang Tai Road  
Kowloon Bay, Hong Kong  
Tel: (852) 2610 1331, Fax: (852)2610 1013  
Email: mielehk@miele.com.hk

## India

Miele India Pvt. Ltd.  
Ground Floor, Copia Corporate Suites  
Plot No. 9, Jasola  
New Delhi - 110025  
Tel: 011-46 900 000, Fax: 011-46 900 001  
E-mail: customercare@miele.in, Internet: www.miele.in

## Ireland

Miele Ireland Ltd.  
2024 Bianconi Avenue  
Citywest Business Campus, Dublin 24  
Tel: (01) 461 07 10, Fax: (01) 461 07 97  
E-Mail: info@miele.ie, Internet: www.miele.ie

**Manufacturer:** Miele & Cie. KG  
Carl-Miele-Straße 29, 33332 Gütersloh, Germany

# Miele

## Malaysia

Miele Sdn Bhd  
Suite 12-2, Level 12  
Menara Sapura Kencana Petroleum  
Solaris Dutamas No. 1, Jalan Dutamas 1  
50480 Kuala Lumpur, Malaysia  
Phone: +603-6209-0288  
Fax: +603-6205-3768

## New Zealand

Miele New Zealand Limited  
IRD 98 463 631  
Level 2, 10 College Hill  
Freemans Bay, Auckland 1011, NZ  
Tel: 0800 464 353  
Internet: www.miele.co.nz

## Singapore

Miele Pte. Ltd.  
163 Penang Road  
# 04 - 03 Winsland House II  
Singapore 238463  
Tel: +65 6735 1191, Fax: +65 6735 1161  
E-Mail: info@miele.com.sg  
Internet: www.miele.sg

## South Africa

Miele (Pty) Ltd  
63 Peter Place, Bryanston 2194  
P.O. Box 69434, Bryanston 2021  
Tel: (011) 875 9000, Fax: (011) 875 9035  
E-mail: info@miele.co.za  
Internet: www.miele.co.za

## United Arab Emirates

Miele Appliances Ltd.  
P.O. Box 11 47 82  
Gold & Diamond Park, Sheikh Zayed Road  
Building 6 / Offices Nos. 6-214 to 6-220  
Dubai  
Tel: +971-4-341 84 44  
Fax: +971-4-341 88 52  
E-Mail: info@miele.ae  
Internet: www.miele.ae